CBS Arc Safe®

Distance Is Safety®

A Group CBS Company

RSA-29A

For GE AKR-6/7/8/910D-30S



Distance is Safety®

WHAT STANDS BETWEEN YOU AND ARC-FLASH DANGER?

WE DO.

More Products by CBS ArcSafe®

RRS-1 - Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-1 is a universal remote racking system capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-1 is quite intuitive and requires only minimal setup. When used properly, the RRS-1 allows technicians to remain outside of the arc flash boundary during the potentially dangerous racking operation.

RRS-2 – Universal Remote Racking System (Non-Rotary)

The CBS ArcSafe® RRS-2 is a universal remote racking system capable of remotely installing and removing non-rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-2 is quite intuitive and requires only minimal setup. When used properly, the RRS-2 allows technicians to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RRS-3 – Application Specific Remote Racking System (Rotary And Non-Rotary)

The CBS ArcSafe® RRS-3 product line is made up of various application specific remote breaker racking devices. Each standalone system allows service personnel to remotely install and remove a particular type of circuit breaker safely while stationed safely outside of the arc flash boundary during the potentially dangerous operation. The lightweight and compact design of the RRS-3 systems makes them ideal for hard to access areas where space is at a premium.

RRS-4 - PLC Based Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-4 universal remote racking system is an updated PLC based version of the best selling RRS-1. The dual mode, source programmable, PLC based control system offers two different operating modes to choose from based on user preference or the application. The RRS-4 is capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear, allowing users to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RSA – Remote Switch Actuator

The CBS ArcSafe® Remote Switch Actuator (RSA) product line is made up of various application specific remote operating devices. These products allow service personnel to remotely perform all aspects of an operation for a particular type of electrical equipment from outside the arc flash boundary – reducing or eliminating the possibility of serious injury or death resulting from an arc flash.

RSO – Remote Switch Operator

During a remote operation, the CBS ArcSafe® RSO functions as both the power supply and user interface for the device being remotely operated by the user. When paired with an applicable CBS ArcSafe® device, this portable standalone system allows service personnel to remotely perform a racking or switching procedure from outside the arc flash boundary – reducing or eliminating the possibility of injury or death resulting from an arc flash

Published and distributed by: CBS ArcSafe® 2616 Sirius Road Denton, Texas 76208

A division of: GroupCBS, Inc.® P.O. Box 1557 Gainesville, Texas 76241

Copyright CBS ArcSafe® 2013

1 Installation

DANGER!

Before servicing any breaker, make sure that it matches the breaker discussed. If the breaker does not match the breaker described above, please call CBS ArcSafe® for more information.

ATTENTION!

The location of certain items such as mimic bus, stickers, and/or placards may interfere with the proper installation of the RSA. Please remove or reposition these items before installing the RSA.

- 1. Ensure that the breaker is free from any obstruction that may interfere with the proper installation of the RSA.
- 2. Place the RSA on the face of the breaker ensuring that the coupler fits over the handle shaft, the frame sits flush against the cabinet, and the tool fully engages the charging mechanism.



3. Ensure that the TRIP solenoid is aligned with the pushbutton. The RSA is ready for remote operations.



2 Operation

ATTENTION!

Please ensure that all cables are clear of moving parts. Failure to do so may result in damage to cables and/or actuator.

ATTENTION!

Please ensure that the batteries to the RSO-IIID are fully charged or that the unit is plugged into AC power.

For detailed instructions on the operation of the RSO-IIID please see the RSO-IIID Manual.

- 1. Ensure that the RSA is properly installed. See the Installation Section for detailed instructions.
- 2. Connect the cables from the RSO-IIID to the RSA.
- 3. The three pin twist type cable will attach to the motor control box, and
- 4. The four pin threaded type will attach to the cable connecting to the solenoid.
- 5. Exit the arc flash boundary
- 6. Turn the power switch on the RSO-IIID to the ON position.
- 7. Program the settings for the RSA into the RSO-IIID. These settings can be found on the placard on the RSA. For more information on programming the RSO-IIID please refer to the RSO-IIID Technical Manual.
- 8. Once the timers have been properly set press the CHARGE/CLOSE button to begin the closing process. Once complete the indicator above the handle operator should read CLOSED.
- 9. To trip the breaker, press the TRIP button.





Notes



CBS Arc Safe®

Distance Is Safety®

A Group CBS Company

RSA-29A Installation and Operation

2616 Sirius Road Denton, TX 76208 Tel: 877-4-SAFETY

Fax: 940-382-9435

Website: www.CBSArcSafe.com Email: info@CBSArcSafe.com

DANGER!

Ensure that personnel using this equipment are adequately trained in the operation of the switchgear they are planning to work with; that they are correctly stationed outside the arc flash boundary; and that they comply with all applicable Federal, State, Local, and In-house safety regulations and procedures. Attention should be given to distance, angle, and personal protective equipment (PPE).