Installation and Operation

CBS ArcSafe®

Distance Is Safety®

A Group CBS Company

RSA-10A

Eaton/Cuter Hammer Ampguard Current Style Handle Operator

Distance is Safety®

WHAT STANDS BETWEEN YOU AND ARC-FLASH DANGER? WE DO.

2616 Sirius Road | Denton, TX 76208 | (877) 4-SAFETY | www.cbsarcsafe.com

Rev. 4/22/2015

More Products by CBS ArcSafe®

RRS-1 – *Universal Remote Racking System (Rotary)*

The CBS ArcSafe® RRS-1 is a universal remote racking system capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-1 is quite intuitive and requires only minimal setup. When used properly, the RRS-1 allows technicians to remain outside of the arc flash boundary during the potentially dangerous racking operation.

RRS-2 – *Universal Remote Racking System (Non-Rotary)*

The CBS ArcSafe® RRS-2 is a universal remote racking system capable of remotely installing and removing non-rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-2 is quite intuitive and requires only minimal setup. When used properly, the RRS-2 allows technicians to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RRS-3 – *Application Specific Remote Racking System (Rotary And Non-Rotary)*

The CBS ArcSafe® RRS-3 product line is made up of various application specific remote breaker racking devices. Each standalone system allows service personnel to remotely install and remove a particular type of circuit breaker safely while stationed safely outside of the arc flash boundary during the potentially dangerous operation. The lightweight and compact design of the RRS-3 systems makes them ideal for hard to access areas where space is at a premium.

RRS-4 – *PLC Based Universal Remote Racking System (Rotary)*

The CBS ArcSafe® RRS-4 universal remote racking system is an updated PLC based version of the best selling RRS-1. The dual mode, source programmable, PLC based control system offers two different operating modes to choose from based on user preference or the application. The RRS-4 is capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear, allowing users to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RSA – *Remote Switch Actuator*

The CBS ArcSafe® Remote Switch Actuator (RSA) product line is made up of various application specific remote operating devices. These products allow service personnel to remotely perform all aspects of an operation for a particular type of electrical equipment from outside the arc flash boundary – reducing or eliminating the possibility of serious injury or death resulting from an arc flash.

RSO – *Remote Switch Operator*

During a remote operation, the CBS ArcSafe® RSO functions as both the power supply and user interface for the device being remotely operated by the user. When paired with an applicable CBS ArcSafe® device, this portable standalone system allows service personnel to remotely perform a racking or switching procedure from outside the arc flash boundary – reducing or eliminating the possibility of injury or death resulting from an arc flash

Published and distributed by:
CBS ArcSafe®
2616 Sirius Road
Denton, Texas 76208

A division of:
GroupCBS, Inc.®
P.O. Box 1557
Gainesville, Texas 76241

Copyright CBS ArcSafe® 2013

Printed in the United States of America
Reproduction, adaptation, or translation without prior written permission is prohibited except as is allowed by law.

1 Installation

DANGER!

Before servicing any breaker, make sure that it matches the breaker discussed. If the breaker does not match the breaker described above, please call CBS ArcSafe® for more information.

ATTENTION!

The location of certain items such as mimic bus, stickers, and/or placards may interfere with the proper installation of the RSA. Please remove or reposition these items before installing the RSA.

1. Ensure that the breaker is free from any obstruction that may interfere with the proper installation of the RSA.

2. Ensure that the RSA-10A motor arm is in the correct position to install onto equipment. If the motor arm is not in the correct position, it can be adjusted manually.
    a. If the contactor handle is in the "ON" position, the RSA-10A motor arm must be rotated to the fully "UP" position to install.
    b. If the contactor handle is in the "OFF" position, the RSA-10A motor arm must be rotated to the fully "DOWN" position to install.
3. Next, hold the device to the left of the contactor's handle, then carefully slide the forked arm of the RSA-10A over the handle. Now, gently rotate the RSA-10A down until the device sits flush against the panel

4. Verify the switch locators are seated flush against the upper and lower edges of the of the switch escutcheon, as seen in the images below.

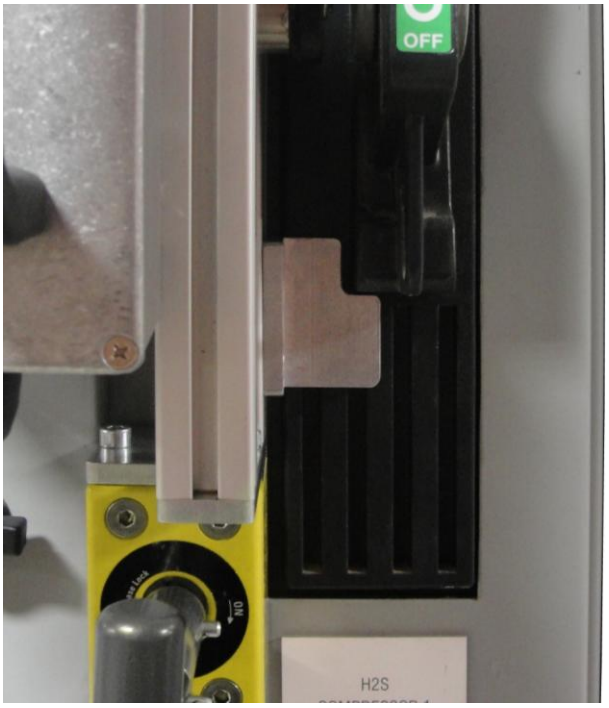

5. Once vertically located, slide the RSA-10A to the left against the low voltage door. The two magnets should be placed directly against the door, as shown in the images below.

6. Verify the magnets are fully seated against the panel with no obstructions.
7. To attach the RSA to the breaker turn the handles of the two twist-lock magnets 180° clockwise.

The RSA-57K is now ready for remote operation

2 Operation

ATTENTION!

Please ensure that all cables are clear of moving parts. Failure to do so may result in damage to cables and/or actuator.

ATTENTION!

Please ensure that the batteries to the RSO-I AR are fully charged or that the unit is plugged into AC power.

For detailed instructions on the operation of the RSO-I AR please see the RSO-I AR Manual.

1. Ensure that the RSA is properly installed. See Section 3 for detailed instructions.
2. Plug the RSO-I AR into the motor control box.
3. Exit the arc flash boundary
4. Turn the power switch on the RSO-I AR to the ON position.
5. Ensure that the Auto Retract (AR) function is OFF
6. If the breaker is ON and needs to be turned OFF then push and hold the TRIP button on the RSO-I until the breaker is tripped.
7. If the breaker is OFF and needs to be turned ON then push and hold the CLOSE button on the RSO-I until the breaker is closed.

Notes

CBS ArcSafe®

Distance Is Safety®

A Group CBS Company

RSA-10A Installation and Operation

2616 Sirius Road
Denton, TX 76208
Tel: 877-4-SAFETY
Fax: 940-382-9435
Website: www.CBSArcSafe.com
Email: info@CBSArcSafe.com

DANGER!

Ensure that personnel using this equipment are adequately trained in the operation of the switchgear they are planning to work with; that they are correctly stationed outside the arc flash boundary; and that they comply with all applicable Federal, State, Local, and In-house safety regulations and procedures. Attention should be given to distance, angle, and personal protective equipment (PPE).