

CBS ArcSafe®

Distance Is Safety®

A Group CBS Company

Installation and Operation


RSA-135E

Eaton/Cutler-Hammer/Pringle:

Pringle Switch - QA: 1200-2500A

(Includes 1200, 1600, 2000, 2500A); Current Vintage;

Straight Handle (Black Or Bare Aluminum) Only, Without Shunt

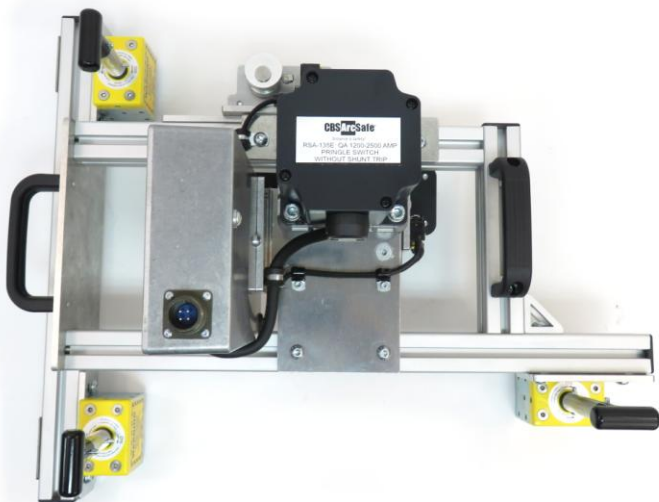

Distance is Safety®

WHAT STANDS
BETWEEN YOU AND
ARC-FLASH DANGER?

**WE
DO.**

2616 Sirius Road | Denton, TX 76208 | (877) 4-SAFETY | www.cbsarcsafe.com

Rev. 8/10/2016

More Products by CBS ArcSafe®

RRS-1 – Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-1 is a universal remote racking system capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-1 is quite intuitive and requires only minimal setup. When used properly, the RRS-1 allows technicians to remain outside of the arc flash boundary during the potentially dangerous racking operation.

RRS-2 – Universal Remote Racking System (Non-Rotary)

The CBS ArcSafe® RRS-2 is a universal remote racking system capable of remotely installing and removing non-rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-2 is quite intuitive and requires only minimal setup. When used properly, the RRS-2 allows technicians to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RRS-3 – Application Specific Remote Racking System (Rotary And Non-Rotary)

The CBS ArcSafe® RRS-3 product line is made up of various application specific remote breaker racking devices. Each standalone system allows service personnel to remotely install and remove a particular type of circuit breaker safely while stationed safely outside of the arc flash boundary during the potentially dangerous operation. The lightweight and compact design of the RRS-3 systems makes them ideal for hard to access areas where space is at a premium.

RRS-4 – PLC Based Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-4 universal remote racking system is an updated PLC based version of the best selling RRS-1. The dual mode, source programmable, PLC based control system offers two different operating modes to choose from based on user preference or the application. The RRS-4 is capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear, allowing users to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RSA – Remote Switch Actuator

The CBS ArcSafe® Remote Switch Actuator (RSA) product line is made up of various application specific remote operating devices. These products allow service personnel to remotely perform all aspects of an operation for a particular type of electrical equipment from outside the arc flash boundary – reducing or eliminating the possibility of serious injury or death resulting from an arc flash.

RSO – Remote Switch Operator

During a remote operation, the CBS ArcSafe® RSO functions as both the power supply and user interface for the device being remotely operated by the user. When paired with an applicable CBS ArcSafe® device, this portable standalone system allows service personnel to remotely perform a racking or switching procedure from outside the arc flash boundary – reducing or eliminating the possibility of injury or death resulting from an arc flash

Published and distributed by:
CBS ArcSafe®
2616 Sirius Road
Denton, Texas 76208

A division of:
GroupCBS, Inc.®
P.O. Box 1557
Gainesville, Texas 76241

Copyright CBS ArcSafe® 2013

Printed in the United States of America
Reproduction, adaptation, or translation without prior written permission is prohibited except as is allowed by law.

1 Installation



DANGER!

Before servicing any breaker, make sure that it matches the breaker discussed. If the breaker does not match the breaker described above, please call CBS ArcSafe® for more information.


ATTENTION!

The location of certain items such as mimic bus, stickers, and/or placards may interfere with the proper installation of the RSA. Please remove or reposition these items before installing the RSA.

1. Ensure that the Breaker Control Switch to be operated is free from obstructions that may interfere with proper installation of the RSA
2. Place the RSA over the handle on the switch. Ensure that the switch actuator arm is fully seated in the handle actuator on the RSA, and that the cabinet locator (below left) and the handle locator (below right) are fully seated.
 - a. The handle adapter on the RSA can be manually rotated to match the switch position as needed.

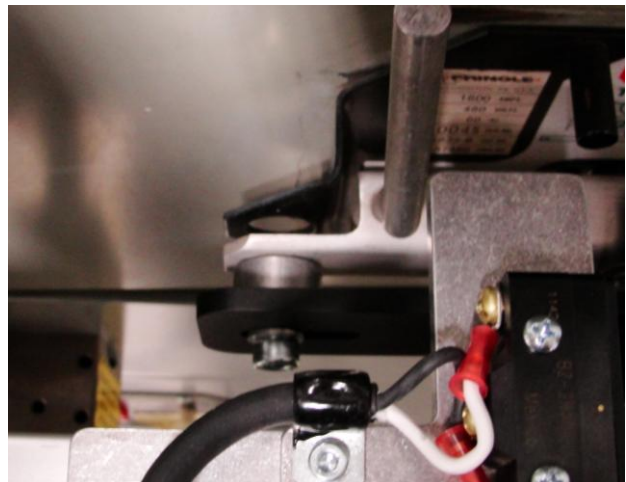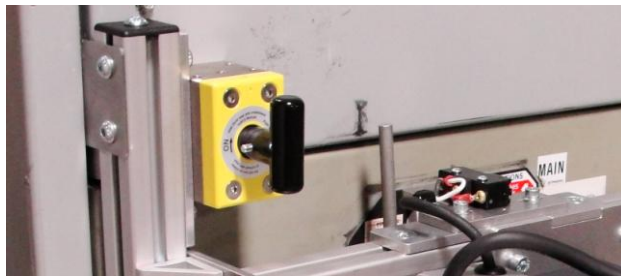

3. Verify that the pegs on the actuator handle are positioned around the switch handle, as indicated below.

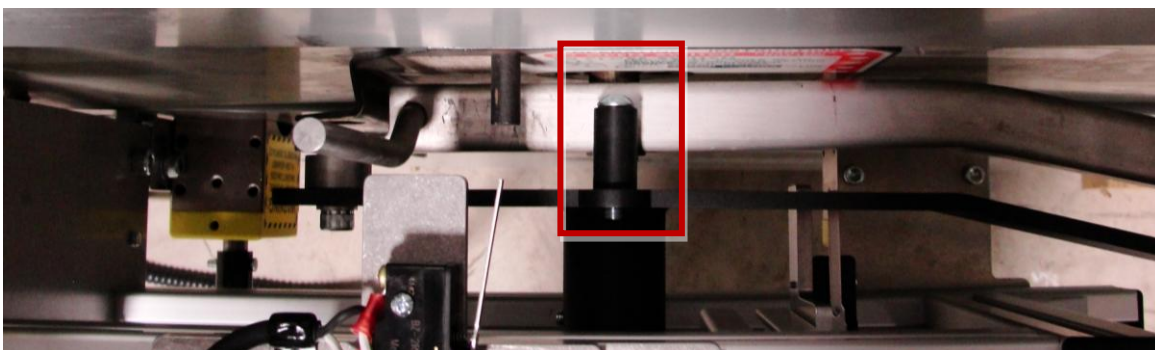

4. Ensure the magnets are fully seated against the switch cover and then turn the handles of the twist-lock magnets 180° to lock the RSA in place.

The RSA is now ready for operation.



2 Operation

ATTENTION!

Please ensure that all cables are clear of moving parts. Failure to do so may result in damage to cables and/or actuator.

ATTENTION!

Please ensure that the batteries to the RSO-I AR are fully charged or that the unit is plugged into AC power.

For detailed instructions on the operation of the RSO-I AR please see the RSO-I AR Manual.

1. Ensure that the RSA is properly installed. See the Installation section for detailed instructions.
2. Plug the RSO-I AR into the motor control box.
3. Exit the arc flash boundary
4. Turn the power switch on the RSO-I AR to the ON position.
5. Ensure that the Auto Retract (AR) function is set according to the placard on the RSA. If not specified, leave AR turned OFF.
6. Press and hold CLOSE to turn the breaker ON.
7. Press and hold TRIP to turn the breaker OFF.



3 Adjustments

The RSA comes adjusted from the factory to fit most common configurations, and should not need to be adjusted in most cases. However, if adjustments do need to be performed, it is recommended that they be done on de-energized and isolated equipment to prevent possible damage or injury.

3.1 Cabinet Locator Adjustment

The locator on the RSA can be adjusted to accommodate some differences in the switch configuration.

1. Loosen the two bolts on each locator tab as shown.




2. Attach the RSA as described in the Installation section.
3. Slide the locator to the desired position to avoid any obstructions on the switch face.
4. Re-tighten the bolts from Step 1.

3.2 Switch Travel Limits

The RSA has travel stops on it to prevent over-travel and damage of the handle operator during operation.

3.2.1 OPEN Travel Limit


1. Loosen the two bolts on the limit switch plate as shown.

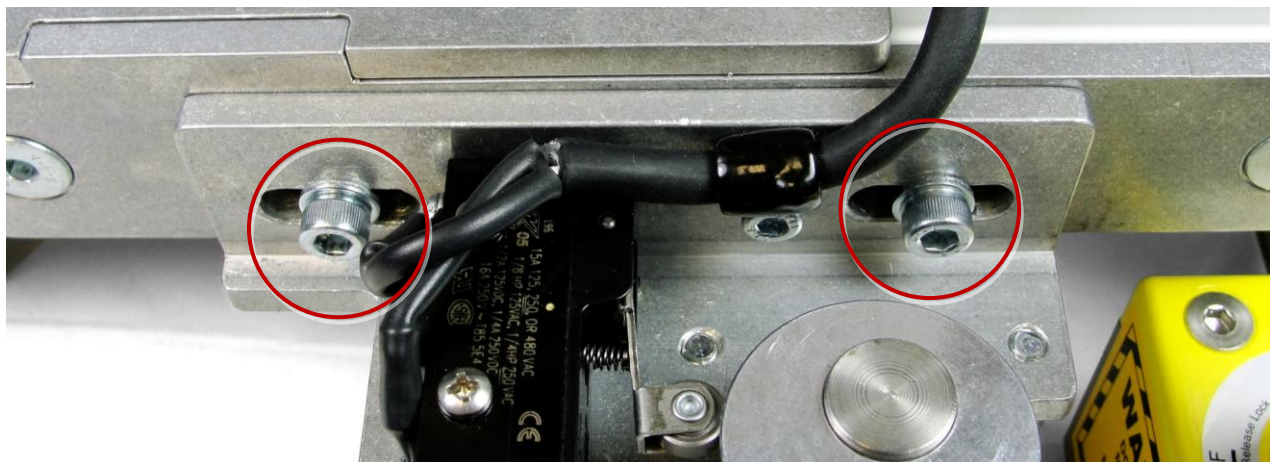

2. Rotate the RSA's actuator arm to match the OPEN position of the switch.
3. Slide the limit switch plate up to the RSA's actuator arm until a slight audible click is heard.




4. If the slots alone do not provide sufficient room to adjust the travel stop as needed, remove both bolts indicated in Step 1 to access a set of alternative holes in the switch plate. Then, reposition the limit switch adjustment slots over the set of holes which will provide the desired adjustment range, replace the screws, and continue adjustment.

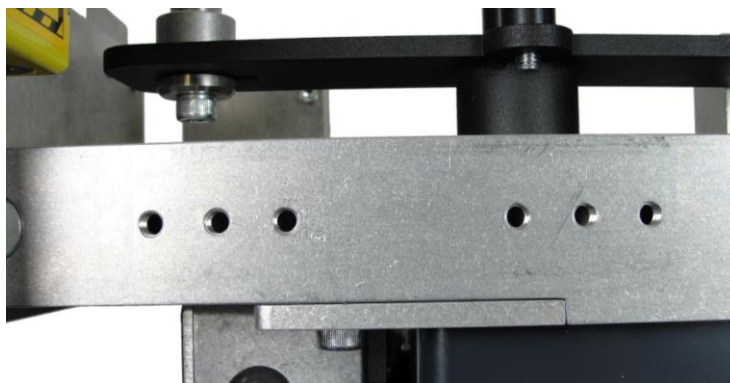


5. Re-tighten the bolts from Step 1.

3.2.2 CLOSE Travel Limit

1. Loosen the two bolts on the limit switch plate as shown.

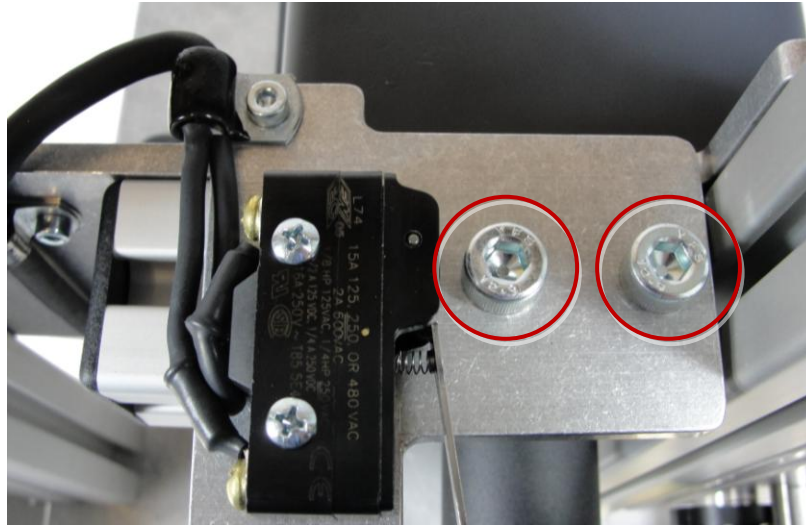

2. Attach the RSA as described in the Installation section.
3. Rotate the RSA's actuator arm to match the CLOSED position of the switch.
4. Slide the limit switch plate up to the RSA's actuator arm until a slight audible click is heard.

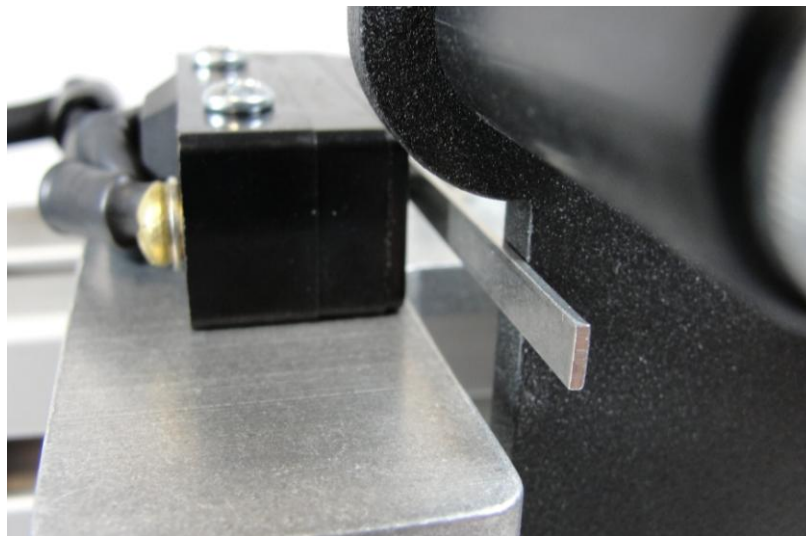

5. Re-tighten the bolts from Step 1.

3.3 Magnet Depth

The magnets on the RSA can be adjusted to accommodate some differences in the depth of the switch housing.

1. Loosen the two bolts attaching each magnet, as shown.





2. Attach the RSA as described in the Installation section.
3. Slide each magnet up or down so the RSA is properly aligned and positioned on the switch.
4. Re-tighten the bolts from Step 1

3.4 Motor Position


The motor mount on the RSA can be adjusted to accommodate differences in the breaker dimensions.

1. Loosen the four bolts on the motor mount plate, and the two bolts from the CLOSED position limit switch plate as indicated below.

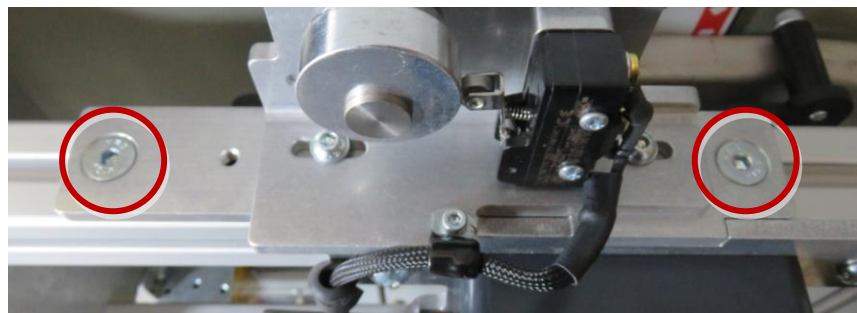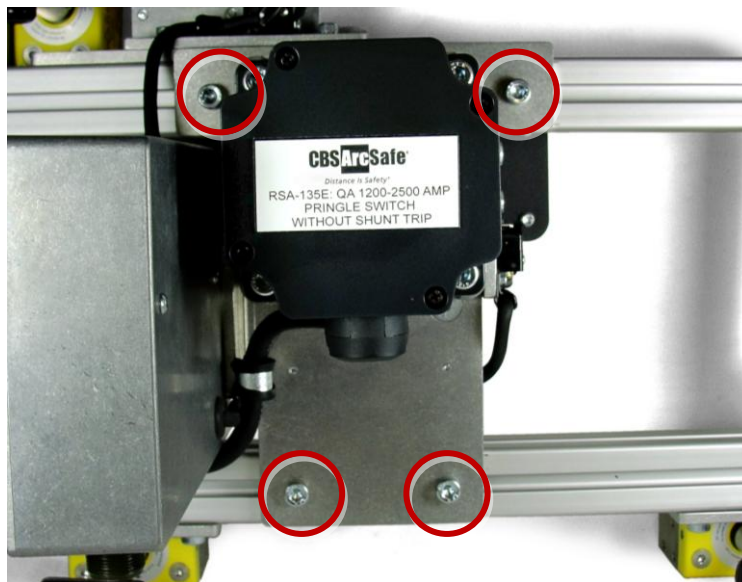

2. Attach the RSA as described in the installation section.

3. Slide the motor assembly as required so the handle locator and the handle adapter are properly positioned.

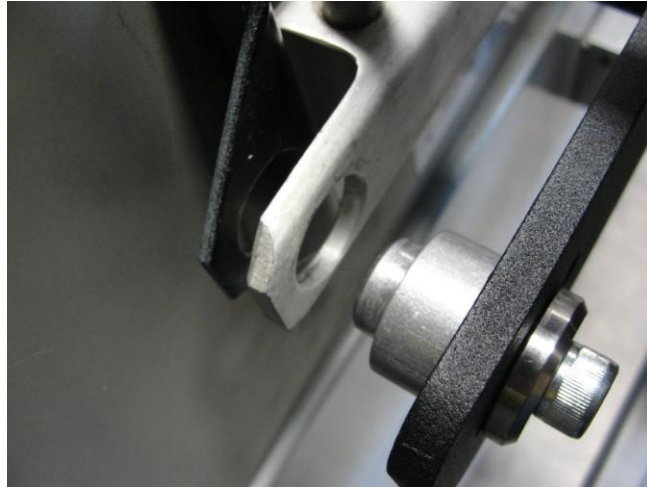

4. Re-tighten all six bolts loosened in Step 1.



Distance Is Safety®

A Group CBS Company

RSA-135E
Installation and Operation

2616 Sirius Road
Denton, TX 76208
Tel: 877-4-SAFETY
Fax: 940-382-9435
Website: www.CBSArcSafe.com
Email: info@CBSArcSafe.com

DANGER!

Ensure that personnel using this equipment are adequately trained in the operation of the switchgear they are planning to work with; that they are correctly stationed outside the arc flash boundary; and that they comply with all applicable Federal, State, Local, and In-house safety regulations and procedures. Attention should be given to distance, angle, and personal protective equipment (PPE).