

CBS ArcSafe®

Distance Is Safety®

A Group CBS Company


Installation and Operation

RSA-164I

For Square D PowerPact - M Frame

Includes MG, MJ

300-800A

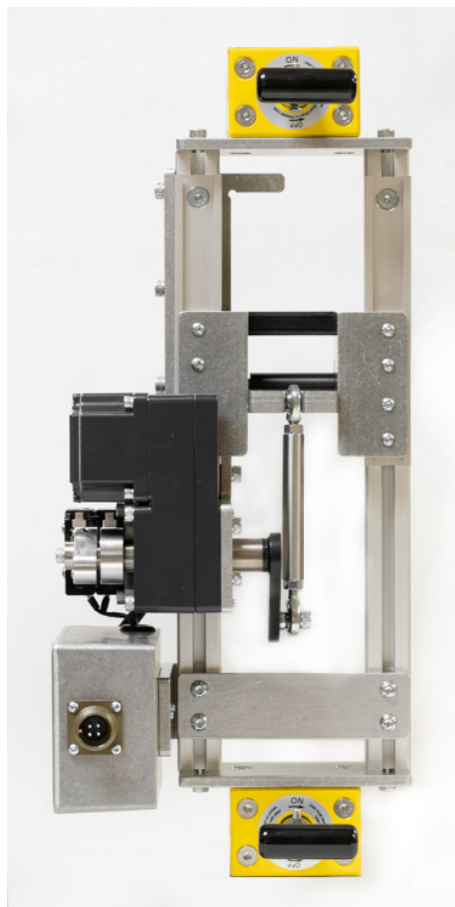

Distance *is* Safety®

WHAT STANDS
BETWEEN YOU AND
ARC-FLASH DANGER?

WE
DO.

2616 Sirius Road | Denton, TX 76208 | (877) 4-SAFETY | www.cbsarcsafe.com

Rev. 3/25/2019

More Products by CBS ArcSafe®

RRS-1 – Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-1 is a universal remote racking system capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-1 is quite intuitive and requires only minimal setup. When used properly, the RRS-1 allows technicians to remain outside of the arc flash boundary during the potentially dangerous racking operation.

RRS-2 – Universal Remote Racking System (Non-Rotary)

The CBS ArcSafe® RRS-2 is a universal remote racking system capable of remotely installing and removing non-rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-2 is quite intuitive and requires only minimal setup. When used properly, the RRS-2 allows technicians to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RRS-3 – Application Specific Remote Racking System (Rotary And Non-Rotary)

The CBS ArcSafe® RRS-3 product line is made up of various application specific remote breaker racking devices. Each standalone system allows service personnel to remotely install and remove a particular type of circuit breaker safely while stationed safely outside of the arc flash boundary during the potentially dangerous operation. The lightweight and compact design of the RRS-3 systems makes them ideal for hard to access areas where space is at a premium.

RRS-4 – PLC Based Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-4 universal remote racking system is an updated PLC based version of the best selling RRS-1. The dual mode, source programmable, PLC based control system offers two different operating modes to choose from based on user preference or the application. The RRS-4 is capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear, allowing users to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RSA – Remote Switch Actuator

The CBS ArcSafe® Remote Switch Actuator (RSA) product line is made up of various application specific remote operating devices. These products allow service personnel to remotely perform all aspects of an operation for a particular type of electrical equipment from outside the arc flash boundary – reducing or eliminating the possibility of serious injury or death resulting from an arc flash.

RSO – Remote Switch Operator

During a remote operation, the CBS ArcSafe® RSO functions as both the power supply and user interface for the device being remotely operated by the user. When paired with an applicable CBS ArcSafe® device, this portable standalone system allows service personnel to remotely perform a racking or switching procedure from outside the arc flash boundary – reducing or eliminating the possibility of injury or death resulting from an arc flash

Published and distributed by:
CBS ArcSafe®
2616 Sirius Road
Denton, Texas 76208

A division of:
GroupCBS, Inc.®
P.O. Box 1557
Gainesville, Texas 76241

Copyright CBS ArcSafe® 2013

Printed in the United States of America
Reproduction, adaptation, or translation without prior written permission is prohibited except as is allowed by law.

1 Installation


DANGER!

Before servicing any breaker, make sure that it matches the breaker discussed. If the breaker does not match the breaker described above, please call CBS ArcSafe® for more information.

ATTENTION!

The location of certain items such as mimic bus, stickers, and/or placards may interfere with the proper installation of the RSA. Please remove or reposition these items before installing the RSA.

1. Ensure that the breaker is free from obstructions that may interfere with proper installation of the RSA
2. Position the actuator on the RSA to match the breaker state, prior to installation. See the Operation section on how to operate the RSA.
3. If the breaker is ON and needs to be turned OFF, use the RSO to position the RSA in the “Closed” position.
4. If the breaker is OFF and needs to be turned ON, use the RSO to position the RSA in the “Open” position.
5. Position the RSA on the breaker, ensuring that the locator on the RSA is flush against the escutcheon of breaker, as well as the frame around the breaker, as shown. Ensure the breaker switch is seated between the rollers on the RSA actuator.

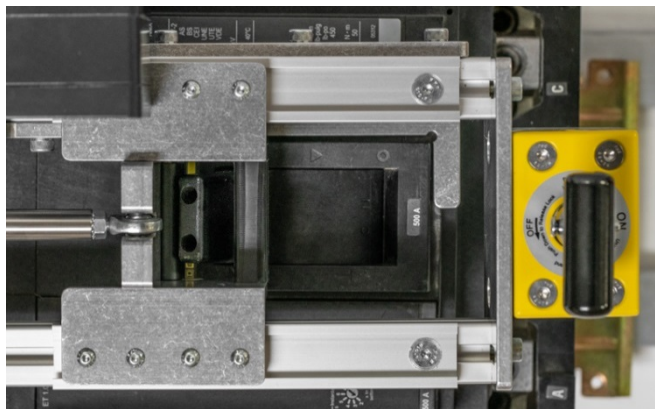

6. Ensure the magnets are fully seated against the breaker door and then turn the handles of the twist-lock magnets 180° to lock the RSA in place.

The RSA is now ready for operation.

2 Operation

ATTENTION!

Please ensure that all cables are clear of moving parts. Failure to do so may result in damage to cables and/or actuator.

ATTENTION!

Please ensure that the batteries to the RSO-I AR are fully charged or that the unit is plugged into AC power.

For detailed instructions on the operation of the RSO-I AR please see the RSO-I AR Manual.

1. Ensure that the RSA is properly installed. See Installation section for detailed instructions.
2. Plug the RSO-I AR into the motor control box.
3. Exit the arc flash boundary
4. Turn the power switch on the RSO-I AR to the position.
5. Ensure that the Auto Retract (AR) function is set according to the placard on the RSA.
6. Press and hold CLOSE to turn the breaker ON.
7. Press and hold TRIP to turn the breaker OFF.



the
ON
ac-


3 Adjustments

The RSA comes adjusted from the factory to fit most common configurations, and should not need to be adjusted in most cases. However, if adjustments do need to be performed, it is recommended that they be done on de-energized and isolated equipment to prevent possible damage or injury.

3.1 Depth Adjustment

The location of each magnet on the RSA can be adjusted in order to avoid interference from items mounted to the breaker door.


1. Loosen the two bolts on each end plate, as shown.

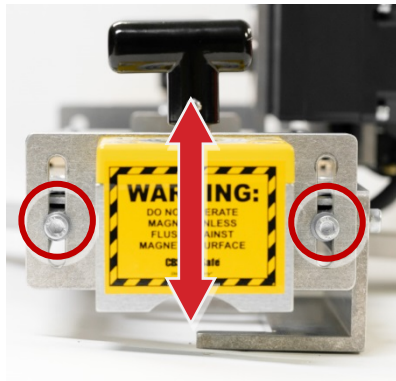

2. Install the RSA as described in the Installation section.
3. Slide the loosened magnets up or down as necessary to position each one so they adequately account for any depth differences.
4. Re-tighten any loosened bolts.

3.2 Locator Adjustment

1. Loosen the three bolts on the locator, as indicated below.

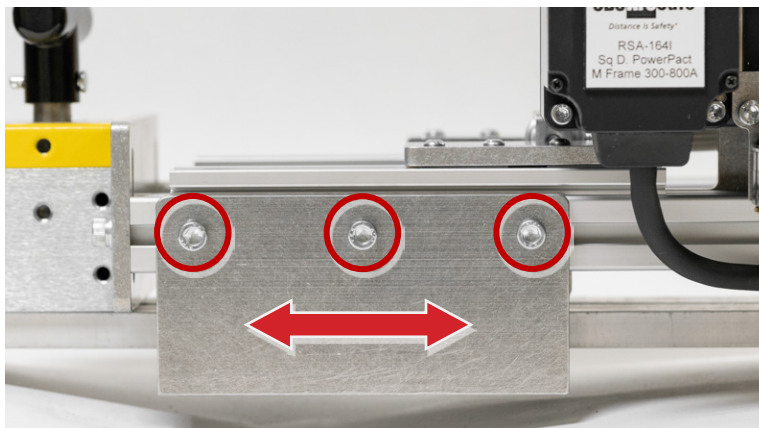


2. Install the RSA as described in the Installation section of this manual.
3. During installation, slide the locator as required to allow the switch to be seated properly between the rollers on the RSA so that the fixed roller on the actuator is touching the switch handle, when the breaker is OFF.

4. Re-tighten the bolts loosened during adjustment. Note that it may be necessary to adjust the travel on the RSA after adjusting the locator.

3.3 Actuator Roller Adjustment


1. Loosen the two bolts holding the adjustable roller on the switch actuator, indicated below.

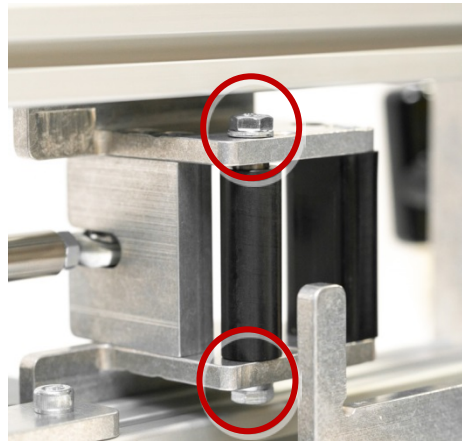


2. With the breaker in the ON position, install the RSA as described in the Installation section.
3. Slide the non-fixed roller up so it rests against the breaker switch, and then re-tighten the bolts.

3.4 Motor Travel Adjustment

1. To set the automatic motor cutoff for the RSA "Open" operation, loosen the set screws on the outer cam (cam farthest from the motor).
2. Move the RSA actuator to the correct open position.
3. Rotate the outer cam clockwise until it engages the outer limit switch roller as shown below. The limit switch clicks when engaged.

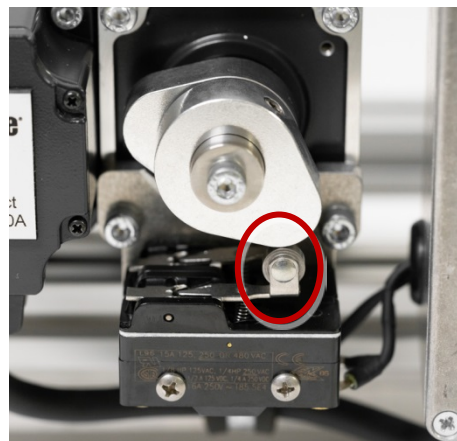

4. Tighten the set screws on the outer cam when finished.
5. To set the automatic motor cut off for the RSA "Close" operation, loosen the set screws on the inner cam (cam closest to the motor).
6. Move the RSA actuator to the correct closed position.
7. Rotate the inner cam counter-clockwise until it engages the inner limit switch roller as shown in the following figure. The limit switch clicks when engaged.

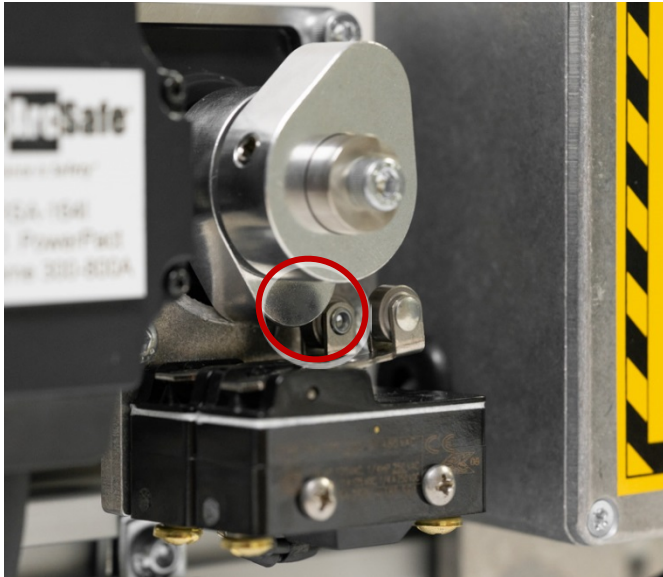

8. Tighten the set screws on the inner cam when finished.

Notes



Distance Is Safety®

A Group CBS Company

RSA-164I
Installation and Operation

2616 Sirius Road
Denton, TX 76208
Tel: 877-4-SAFETY
Fax: 940-382-9435
Website: www.CBSArcSafe.com
Email: info@CBSArcSafe.com

DANGER!

Ensure that personnel using this equipment are adequately trained in the operation of the switchgear they are planning to work with; that they are correctly stationed outside the arc flash boundary; and that they comply with all applicable Federal, State, Local, and In-house safety regulations and procedures. Attention should be given to distance, angle, and personal protective equipment (PPE).