

# CBS ArcSafe®


*Distance Is Safety®*

A Group CBS Company

# Installation and Operation

## RSA-67

For Powell Series P-13000 Class E-2 Controller  
2.5-5kV Voltage Class

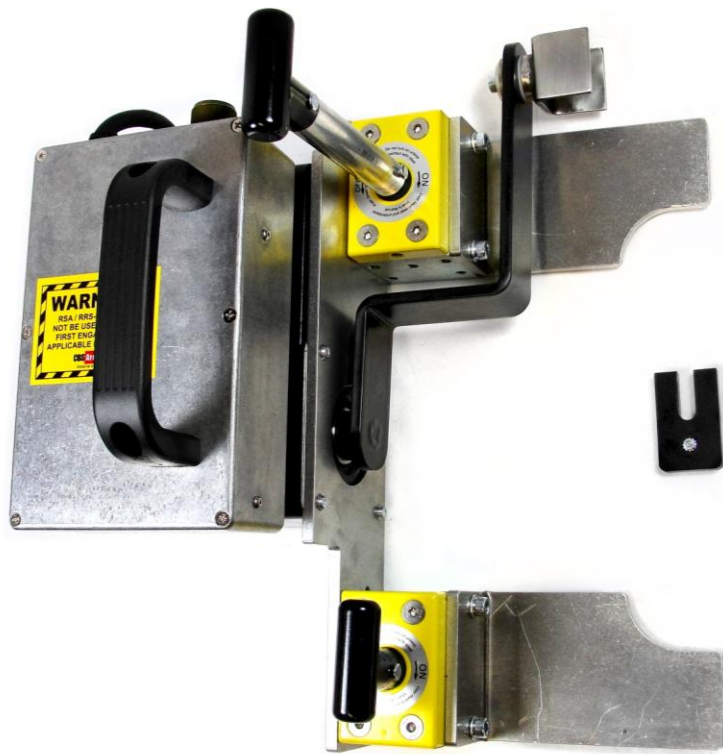

**Distance is Safety®**

WHAT STANDS  
BETWEEN YOU AND  
ARC-FLASH DANGER?

**WE  
DO.**

2616 Sirius Road | Denton, TX 76208 | (877) 4-SAFETY | [www.cbsarcsafe.com](http://www.cbsarcsafe.com)

Rev. 7/10/2015

## More Products by CBS ArcSafe®

### **RRS-1 – Universal Remote Racking System (Rotary)**

The CBS ArcSafe® RRS-1 is a universal remote racking system capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-1 is quite intuitive and requires only minimal setup. When used properly, the RRS-1 allows technicians to remain outside of the arc flash boundary during the potentially dangerous racking operation.

### **RRS-2 – Universal Remote Racking System (Non-Rotary)**

The CBS ArcSafe® RRS-2 is a universal remote racking system capable of remotely installing and removing non-rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-2 is quite intuitive and requires only minimal setup. When used properly, the RRS-2 allows technicians to remain outside of the arc flash boundary during the potentially hazardous racking operation.

### **RRS-3 – Application Specific Remote Racking System (Rotary And Non-Rotary)**

The CBS ArcSafe® RRS-3 product line is made up of various application specific remote breaker racking devices. Each standalone system allows service personnel to remotely install and remove a particular type of circuit breaker safely while stationed safely outside of the arc flash boundary during the potentially dangerous operation. The lightweight and compact design of the RRS-3 systems makes them ideal for hard to access areas where space is at a premium.

### **RRS-4 – PLC Based Universal Remote Racking System (Rotary)**

The CBS ArcSafe® RRS-4 universal remote racking system is an updated PLC based version of the best selling RRS-1. The dual mode, source programmable, PLC based control system offers two different operating modes to choose from based on user preference or the application. The RRS-4 is capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear, allowing users to remain outside of the arc flash boundary during the potentially hazardous racking operation.

### **RSA – Remote Switch Actuator**

The CBS ArcSafe® Remote Switch Actuator (RSA) product line is made up of various application specific remote operating devices. These products allow service personnel to remotely perform all aspects of an operation for a particular type of electrical equipment from outside the arc flash boundary – reducing or eliminating the possibility of serious injury or death resulting from an arc flash.

### **RSO – Remote Switch Operator**

During a remote operation, the CBS ArcSafe® RSO functions as both the power supply and user interface for the device being remotely operated by the user. When paired with an applicable CBS ArcSafe® device, this portable standalone system allows service personnel to remotely perform a racking or switching procedure from outside the arc flash boundary – reducing or eliminating the possibility of injury or death resulting from an arc flash

Published and distributed by:  
CBS ArcSafe®  
2616 Sirius Road  
Denton, Texas 76208

A division of:  
GroupCBS, Inc.®  
P.O. Box 1557  
Gainesville, Texas 76241

Copyright CBS ArcSafe® 2013

Printed in the United States of America  
Reproduction, adaptation, or translation without prior written permission is prohibited except as is allowed by law.

# 1 Installation

## DANGER!

Before servicing any breaker, make sure that it matches the breaker discussed. If the breaker does not match the breaker described above, please call CBS ArcSafe® for more information.

## ATTENTION!

The location of certain items such as mimic bus, stickers, and/or placards may interfere with the proper installation of the RSA. Please remove or reposition these items before installing the RSA.

1. Ensure that the switch is free from any obstruction that may interfere with the proper installation of the RSA.




2. To adjust the RSA for accommodating unavoidable obstructions such as bolt heads or lock-out mechanisms, see the Adjustments section, and make any applicable adjustments to the RSA before attempting to install.
3. Align the RSA to the handle escutcheon on the same side as the switch's operating handle, then slide the handle adapter of the RSA over the switch handle, and gently lower or slide the RSA into place. Rotate the actuator arm by hand to re-align as needed.



4. Ensure that the locators on the RSA are flush with the switch escutcheon, as shown.



5. Turn the handles of the twit-lock magnets 180° clockwise to lock the RSA in place.
6. Pull the spring-loaded interlock peg on the switch handle out, and insert the interlock defeat tool.

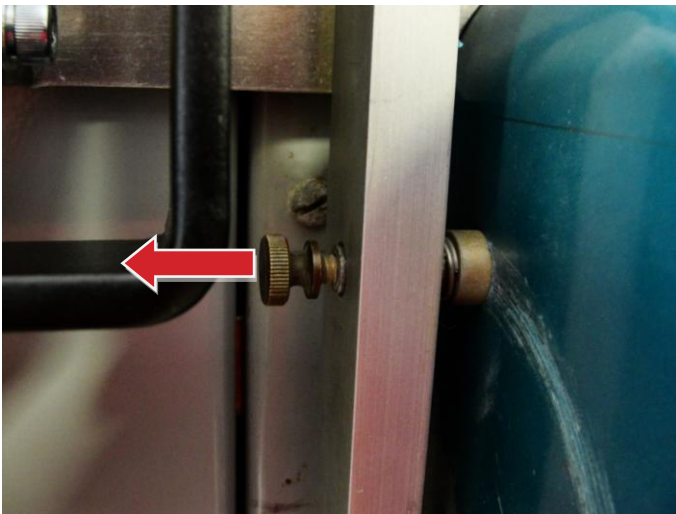

7. If the switch handle is loose, rotate it out from the switchgear a small amount so that the handle interlock does not interfere with operation.

The RSA is now ready for remote operation



## 2 Operation

### ATTENTION!

Please ensure that all cables are clear of moving parts. Failure to do so may result in damage to cables and/or actuator.

### ATTENTION!

Please ensure that the batteries to the RSO-I AR are fully charged or that the unit is plugged into AC power.

For detailed instructions on the operation of the RSO-I AR please see the RSO-I AR Manual.

1. Ensure that the RSA is properly installed. See Section 3 for detailed instructions.
2. Plug the RSO-I AR into the motor control box.
3. Exit the arc flash boundary
4. Turn the power switch on the RSO-I AR to the ON position.
5. Ensure that the Auto Retract (AR) function is OFF
6. If the switch is CLOSED and needs to be opened, press and hold the TRIP button on the RSO-I AR until the switch is fully open.
7. If the switch is OPEN and needs to be closed, press and hold the CLOSE button on the RSO-I AR until the switch is fully closed.




## 3 Adjustments

The RSA comes adjusted from the factory to fit most common configurations, and should not need to be adjusted in most cases. However, if adjustments do need to be performed, it is recommended that they be done on de-energized and isolated equipment to prevent possible damage or injury.

### 3.1 Locator Adjustment

The depth of the handle locator on the RSA can be adjusted in order to avoid interference from items mounted to the switchgear door.

1. Loosen the two bolts on the adjustable locator plate, as shown below.

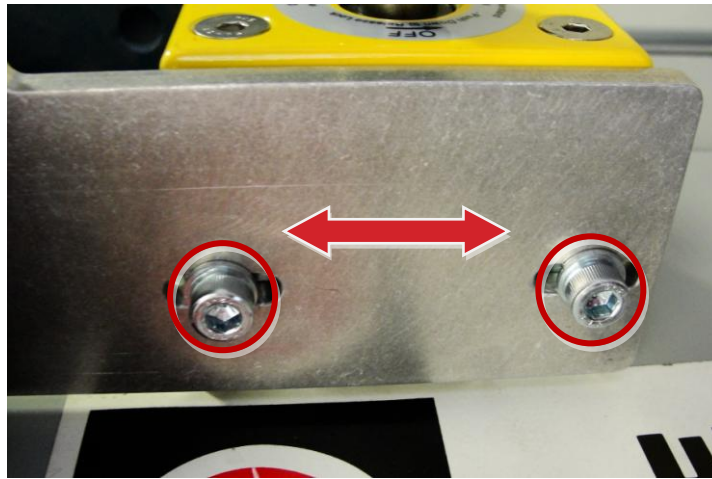

2. Slide the locator as necessary to position them flush to the lower and side edge of the handle escutcheon.
3. Re-tighten the two bolts.



## 3.2 Travel Adjustment

The travel length for the motor arm may be adjusted to avoid damage to the switch.

1. Install the RSA on the face of the switch as described in the Installation section.
2. Loosen the lock screws on the backs of the two switch cams.





3. With the RSA operator arm in the OPEN position, rotate the outer limit switch cam until the limit switch is undepressed and clicks slightly, then rotate the cam back onto the switch until another slight click is heard, and the switch is depressed. Re-tighten the lock-screw on the cam.

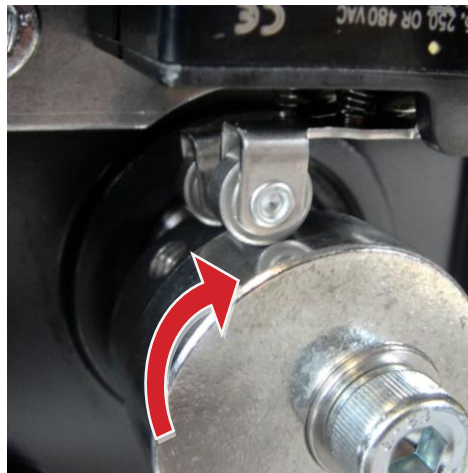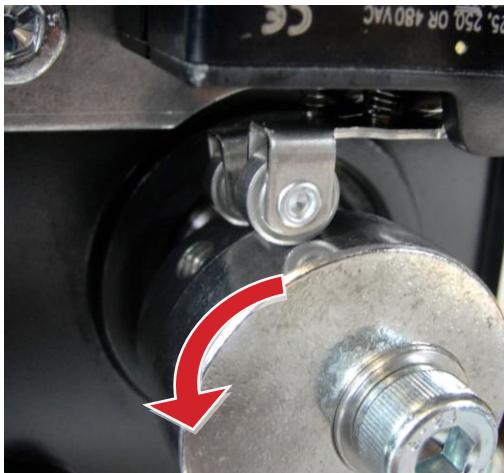

4. With the RSA operator arm in the CLOSED position, rotate the inner limit switch cam in the direction of travel for the arm, until a slight click is heard. Re-tighten the lock screw.



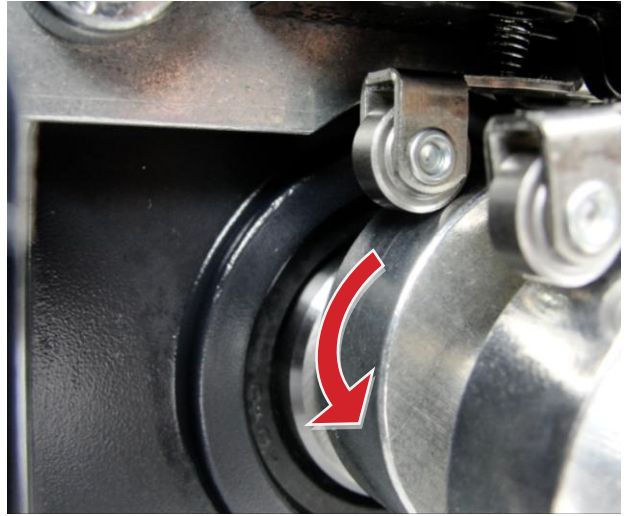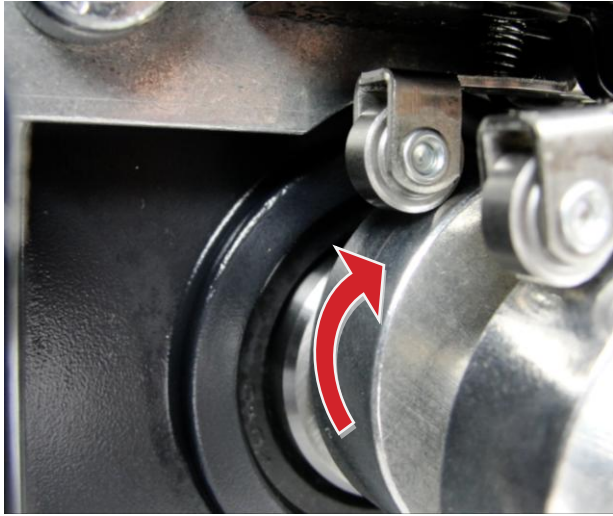







*Distance Is Safety*®

A Group CBS Company

RSA-67  
Installation and Operation

2616 Sirius Road  
Denton, TX 76208  
Tel: 877-4-SAFETY  
Fax: 940-382-9435  
Website: [www.CBSArcSafe.com](http://www.CBSArcSafe.com)  
Email: [info@CBSArcSafe.com](mailto:info@CBSArcSafe.com)

**DANGER!**

Ensure that personnel using this equipment are adequately trained in the operation of the switchgear they are planning to work with; that they are correctly stationed outside the arc flash boundary; and that they comply with all applicable Federal, State, Local, and In-house safety regulations and procedures. Attention should be given to distance, angle, and personal protective equipment (PPE).