

CBS ArcSafe®

Distance Is Safety®

A Group CBS Company

Installation and Operation

RSA-72A

For GE Spectra Series Molded Case Circuit Breaker
SK Frame: 300-1200A (Includes SKD, SKH, SKL, SKP)
Flush Mount With Handle Extension



Distance is Safety®

WHAT STANDS
BETWEEN YOU AND
ARC-FLASH DANGER?

**WE
DO.**

2616 Sirius Road | Denton, TX 76208 | (877) 4-SAFETY | www.cbsarcsafe.com

Rev. 3/9/2016

More Products by CBS ArcSafe®

RRS-1 – Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-1 is a universal remote racking system capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-1 is quite intuitive and requires only minimal setup. When used properly, the RRS-1 allows technicians to remain outside of the arc flash boundary during the potentially dangerous racking operation.

RRS-2 – Universal Remote Racking System (Non-Rotary)

The CBS ArcSafe® RRS-2 is a universal remote racking system capable of remotely installing and removing non-rotary style draw out circuit breakers without requiring any modification to the existing switchgear. Operation of the simple to use RRS-2 is quite intuitive and requires only minimal setup. When used properly, the RRS-2 allows technicians to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RRS-3 – Application Specific Remote Racking System (Rotary And Non-Rotary)

The CBS ArcSafe® RRS-3 product line is made up of various application specific remote breaker racking devices. Each standalone system allows service personnel to remotely install and remove a particular type of circuit breaker safely while stationed safely outside of the arc flash boundary during the potentially dangerous operation. The lightweight and compact design of the RRS-3 systems makes them ideal for hard to access areas where space is at a premium.

RRS-4 – PLC Based Universal Remote Racking System (Rotary)

The CBS ArcSafe® RRS-4 universal remote racking system is an updated PLC based version of the best selling RRS-1. The dual mode, source programmable, PLC based control system offers two different operating modes to choose from based on user preference or the application. The RRS-4 is capable of remotely installing and removing rotary style draw out circuit breakers without requiring any modification to the existing switchgear, allowing users to remain outside of the arc flash boundary during the potentially hazardous racking operation.

RSA – Remote Switch Actuator

The CBS ArcSafe® Remote Switch Actuator (RSA) product line is made up of various application specific remote operating devices. These products allow service personnel to remotely perform all aspects of an operation for a particular type of electrical equipment from outside the arc flash boundary – reducing or eliminating the possibility of serious injury or death resulting from an arc flash.

RSO – Remote Switch Operator

During a remote operation, the CBS ArcSafe® RSO functions as both the power supply and user interface for the device being remotely operated by the user. When paired with an applicable CBS ArcSafe® device, this portable standalone system allows service personnel to remotely perform a racking or switching procedure from outside the arc flash boundary – reducing or eliminating the possibility of injury or death resulting from an arc flash

Published and distributed by:
CBS ArcSafe®
2616 Sirius Road
Denton, Texas 76208

A division of:
GroupCBS, Inc.®
P.O. Box 1557
Gainesville, Texas 76241

Copyright CBS ArcSafe® 2013

Printed in the United States of America
Reproduction, adaptation, or translation without prior written permission is prohibited except as is allowed by law.

1 Installation

DANGER!

Before servicing any breaker, make sure that it matches the breaker discussed. If the breaker does not match the breaker described above, please call CBS ArcSafe® for more information.

ATTENTION!

The location of certain items such as mimic bus, stickers, and/or placards may interfere with the proper installation of the RSA. Please remove or reposition these items before installing the RSA.

1. Ensure that the breaker is free from any obstruction that may interfere with the proper installation of the RSA.



2. Position the actuator of the RSA-72A to match the breaker handle before installation.
 - a. If the breaker is ON and the breaker is to be turned OFF, ensure that the actuator is retracted by pressing and holding the TRIP button on the RSO-I AR. If the slide appears to be misaligned with the control switch, slowly retract the slide by pressing the CLOSE button on the RSO-I AR briefly to align with the switch.
 - b. If the breaker is OFF and the breaker is to be turned ON, ensure that the actuator is extended by pressing and holding the CLOSE button on the RSO-I AR. If the slide appears to be misaligned with the control switch, slowly extend the slide by pressing the TRIP button on the RSO-I AR briefly to align with the switch.
3. If the breaker was opened by a TRIP signal, than the slide must be aligned with the control switch by pressing the TRIP button on the RSO-I AR to extend the actuator, and and CLOSE button on the RSO-I AR to retract the actuator. See the Operation section for more information.

4. Rotate handle extension on breaker to face outward and tighten the nut on the extension to prevent unwanted movement and allow proper mounting.



5. Place the RSA-72A over the switch on the circuit breaker and ensure that the base is flush with the breaker before operating.



- Secure the RSA-72A to the breaker by turning the handle of each magnet 180 degrees clockwise, locking the RSA in place.
The RSA is now ready for remote operations.



2 Operation

ATTENTION!

Please ensure that all cables are clear of moving parts. Failure to do so may result in damage to cables and/or actuator.

ATTENTION!

Please ensure that the batteries to the RSO-I AR are fully charged or that the unit is plugged into AC power.

For detailed instructions on the operation of the RSO-I AR please see the RSO-I AR Manual.

1. Ensure that the RSA is properly installed. See Section 3 for detailed instructions.
2. Plug the RSO-I AR into the motor control box.
3. Exit the arc flash boundary
4. Turn the power switch on the RSO-I AR to the ON position.
5. Ensure that the Auto Retract (AR) function is OFF
6. If the breaker is ON and needs to be turned OFF then push and hold the TRIP button on the RSO-I until the breaker is tripped.
7. If the breaker is OFF and needs to be turned ON then push and hold the CLOSE button on the RSO-I until the breaker is closed.




3 Adjustments

The RSA comes adjusted from the factory to fit most common configurations, and should not need to be adjusted in most cases. However, if adjustments do need to be performed, it is recommended that they be done on de-energized and isolated equipment to prevent possible damage or injury.

3.1 Magnet Depth Adjustment

The depth of the magnets on the RSA can be adjusted to accommodate some differences in the mounting depth of the breaker.

1. Loosen the two bolts on each magnet as shown.

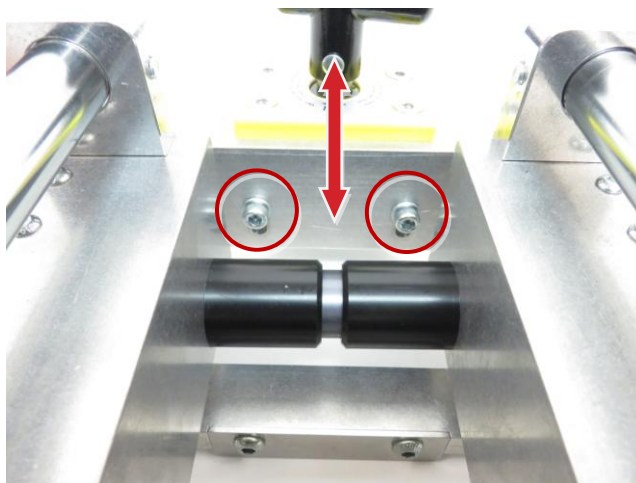

2. Attach the RSA as described in the Installation section.
3. Slide each magnet in or out as required to achieve proper mounting depth.
4. Re-tighten the bolts from Step 1.



Distance Is Safety®

A Group CBS Company

RSA-72A
Installation and Operation

2616 Sirius Road
Denton, TX 76208
Tel: 877-4-SAFETY
Fax: 940-382-9435
Website: www.CBSArcSafe.com
Email: info@CBSArcSafe.com

DANGER!

Ensure that personnel using this equipment are adequately trained in the operation of the switchgear they are planning to work with; that they are correctly stationed outside the arc flash boundary; and that they comply with all applicable Federal, State, Local, and In-house safety regulations and procedures. Attention should be given to distance, angle, and personal protective equipment (PPE).