



A Group CBS Company

## USERS MANUAL

# RSK-RL12

## A Portable Actuator for Remotely Operating a Siemens Type "LA" Breaker



# Distance *is* Safety<sup>®</sup>

WHAT STANDS  
BETWEEN YOU  
AND ARC-FLASH  
DANGER?

# WE DO.

[CBSArcSafe.com](http://CBSArcSafe.com) | Email: [info@CBSArcSafe.com](mailto:info@CBSArcSafe.com) | **877-4-SAFETY** | Fax: 940-382-9435

Rev. August 2019

## User's Manual for the following RSK models:

### RSK-LA12

- 1.0 Arc-Blast Hazards
- 2.0 Safety Information
  - 2.1 Finger pinch points
  - 2.2 Strong magnets
- 3.0 Battery Requirements
  - 3.1 Battery Requirements
  - 3.2 Battery Life
  - 3.3 Battery Replacement
- 4.0 Operation
  - 4.1 Connecting the control cable
  - 4.2 Sequence of operation
  - 4.3 Attaching and removing the actuator
  - 4.4 Indicator lights
- 5.0 Care and Storage
  - 5.1 Cleaning the Magnets
  - 5.2 Storage
- 6.0 Warranty
- 7.0 Specifications



**DANGER**

**ELECTRICAL SWITCHING MAY PRESENT RISK OF SERIOUS INJURY OR DEATH. THIS DEVICE SHOULD ONLY BE USED BY QUALIFIED PERSONS AFTER CAREFUL ANALYSIS OF THE HAZARDS.**

### 1.0 Arc-blast Hazards

The hazards associated with electrical arc-blasts are well documented. Studies conducted by numerous industries and professional organizations have sought to quantify the intensity of arc-blast, the risks to personnel, and various methodologies for mitigating the risks.

Without doubt, increasing the distance between the arc and a human is the single greatest favorable factor in reducing injuries.

The Chicken Switch® is not a panacea but rather one more tool available for protecting workers while they are performing electrical switching.

Using a Chicken Switch® may not negate the need for additional personal protective measures. The user is ultimately responsible for evaluating each situation to determine if additional protective measures are needed.

## 2.0 Safety Information

ALWAYS connect the control cable to the actuator BEFORE installing the Chicken Switch®.

### 2.1 Finger Pinch Points:

NEVER place your fingers near the Close and Trip operating arms on the Chicken Switch. The Chicken Switch provides considerable torque and doing so could allow your fingers to be pinched.



NEVER place your fingers near of the bottom of the Chicken Switch magnet when the actuator is near a ferrous surface or your fingers could be pinched.

### 2.2 Strong Magnets:

The holding magnet is very strong. Keep magnetically-sensitive objects such as watches or computer disks away from the bottom of the actuator.

## 3.0 Battery Information

### 3.1 Battery Requirements


- Sixteen (16) AA alkaline cells are required –eight cells in each battery holder. Carefully observe polarity when installing cells.
- Rechargeable NiMh or NiCd can be used.

### 3.2 Battery Life

- A set of fresh alkaline cells should give over 700 operations.
- Do not leave actuator connected to the hand-held controller when not in use. The microprocessor is powered when the two units are connected and will run the batteries down within days if left connected.


### 3.3 Battery Replacement

- ALWAYS disconnect the control cable before replacing batteries to avoid possible static damage of the electronics!

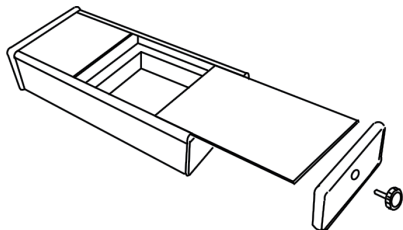

- Turn the control station upside down, remove the endplate retaining knob. Remove the endplate and slide the cover out as shown in the previous column.

### 3.4 To Connect/Disconnect Batteries

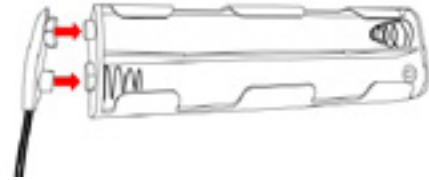

### 3.5 CAUTION: Static Discharge Potential

- To avoid possible damage to electronic components disconnect the control cable before replacing batteries.


## WARNING

**TO AVOID POSSIBLE DAMAGE TO ELECTRONIC COMPONENTS DISCONNECT CONTROL CABLE BEFORE REPLACING BATTERIES.**

## 4.0 Operation

ALWAYS connect the control cable to the actuator BEFORE installing the Chicken Switch®.

### 4.1 Connecting the Control Cable:



1. Align the arrow on the cable end with the top of the receptacle.
2. Push in and engage the threads on the coupling nut and turn clockwise.
3. After one or two turns of the coupling nut, push in on the cable end. Repeat this until the connector is fully seated.
4. Use a similar technique of turn-stop-and-pull to disengage the cable ends.

## 4.2 Sequence of Operation:

1. Connect the control cable to the actuator.
2. Connect the control cable to the hand-held controller. The actuator will move to the neutral position if not already in this position.
3. Install the actuator on the breaker by following the steps in Section 4.3
4. Ensure you are at a safe distance from the circuit breaker that is to be operated.
5. When ready to operate the breaker, press and hold the Enable button while twisting the control switch for the desired operation.
6. To remove actuator reverse the steps in Section 4.3.

## 4.3 Attaching and Removing the Actuator:

1. Connect the control cable to the actuator.
2. Connect the control cable to the hand-held controller. The actuator will move to the neutral position if not already in this position.
3. Install the actuator on the breaker by following the steps in Section 4.3
4. Ensure you are at a safe distance from the circuit breaker that is to be operated.
5. When ready to operate the breaker, press and hold the Enable button while twisting the control switch for the desired operation.
6. To remove actuator reverse the steps in Section 4.3.



**STEP 1:** Ensure the racking door is fully closed and the breaker's spring is CHARGED. Insert the alignment pin into the lockout hole.



**STEP 2:** Carefully position the actuator over the breaker as shown.

HOLD actuator to the left, against the charging lever.



### ATTENTION

**BEFORE PROCEEDING WITH INSTALLING THE ACTUATOR, BE SURE THE ACTUATOR HAS BEEN CONNECTED THE HAND-HELD CONTROLLER WITH THE CONTROL CABLE.**



**STEP 3:** Insert locking pin through the actuator latch and racking shutter door as shown.

**GREEN:** indicates the actuator is being commanded to rotate in the TRIP direction.

**RED:** indicates the actuator is being commanded to rotate in the CLOSE direction.

**YELLOW:** indicates the actuator is in the neutral position and the controller and batteries are healthy.

Rapidly **blinking YELLOW** indicates the battery voltage with zero load has fallen to an unacceptable level. Operation is inhibited until batteries with an acceptable voltage level are installed.


#### The ENABLE button:

The Enable button must be continuously depressed in order to command the actuator.

Releasing the enable button has the same affect as returning the selector switch to neutral – the actuator moves to neutral.

#### Note:

If the control switch is held in the trip or close position for longer than approximately 3 seconds the drive motor will de-energize and the arm will remain in driven position. When the control switch or the enable button is released, the motor will energize to drive the actuator arm to neutral.

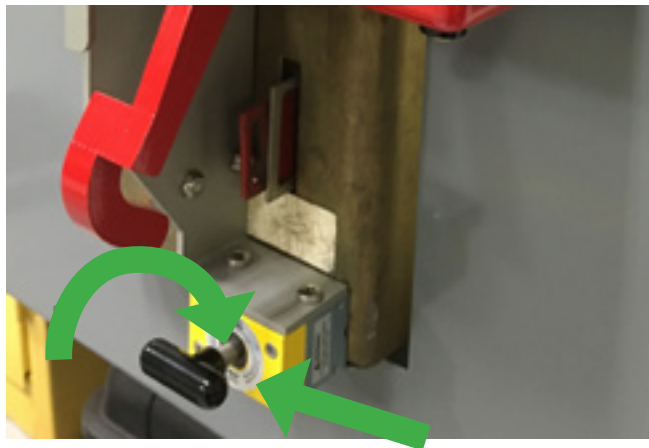

**STEP 4:** Activate the holding magnet by pushing the 'T' handle and rotating clockwise.


### CAUTION

**THE RSK-LA12 RED TRIP ARM SHOULD NOT CONTACT THE BREAKER TRIP PLATE WHEN INSTALLING.**

**DO NOT INSTALL IF THE TRIP ARM WILL CONTACT THE TRIP PLATE OR THE BREAKER COULD BE INADVERTENTLY TRIPPED.**

#### 4.4 The indicator lights & controls:

NOTE: Red and Green indicator lights only work when the ENABLE button is depressed.

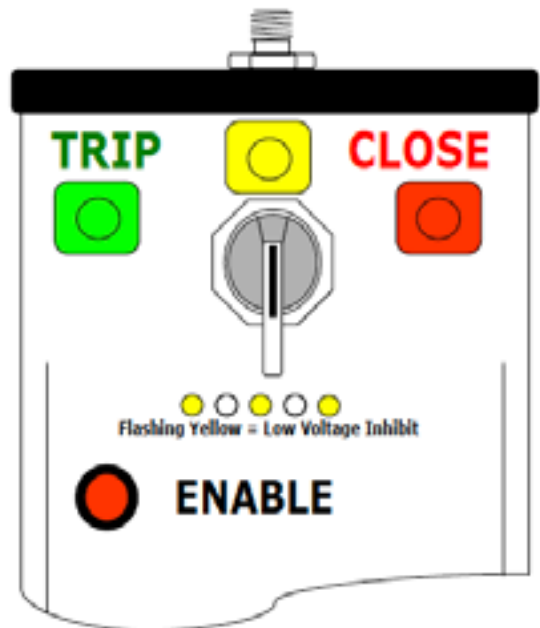

## 5.0 Care and Storage

### 5.1 Cleaning the magnets:

Over a period of time, the magnets may attract ferrous debris. Exercise care to avoid setting the actuator where the magnets might attract debris. If this does occur, use a paper towel or nylon bristle brush to clean the face of the magnets. Keeping the magnet faces clean ensures that maximum holding power is maintained.

### 5.2 Storage:

Remove all batteries from the control station if the device will not be used for longer than 6 months.

Never store the batteries where the ambient temperature might exceed 110° F.

Avoid getting the unit wet or storing it in a high humidity location.

## 6.0 Warranty

CBS ArcSafe® guarantees all products manufactured by CBS ArcSafe® only against defects in materials and/or workmanship for a period of twelve (12) months commencing on the date the product is received by the customer. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

CBS ArcSafe® will, at its option and its cost (excluding shipping expenses) repair, replace or refund the purchase price of any product manufactured by CBS ArcSafe® which has a covered defect in materials and/or workmanship. THIS IS CUSTOMER'S EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. IN NO EVENT WILL CBS ARCSAFE'S® LIABILITY FOR DAMAGES (WHETHER ARISING FROM BREACH OF CONTRACT OR WARRANTY, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE) EXCEED THE PURCHASE PRICE OF THE PRODUCT CONCERNED NOR WILL CBS ARCSAFE® BE LIABLE FOR PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS) EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty does not cover damage caused by accident, improper care, negligence, normal wear and tear, natural causes, unlicensed repairs, and incompetent supervision. This warranty also does not cover repairs or replacements made by unauthorized individuals except when agreed to in writing. CBS ArcSafe® reserves the right to disallow warranty repairs if the unit has been disassembled or misused, as determined by CBS ArcSafe® in good faith. Please contact us at (877) 472-3389.

**CBS Arc Safe®**

2616 Sirius Road  
Denton, TX 76208  
(940) 382-4411  
(877) 472-3389  
WWW.CBSArcSafe.com

## 7.0 Specifications

### MECHANICAL

Holding magnets:	One magnet, rated @ 165 lbs force, 1
Gearmotor:	All metal gears, in a formed metallic housing. DC brushed, permanent magnet motor with .375 inch diameter shaft (9.5 mm).
Projected life:	20,000 operations

### ELECTRICAL

Operating voltage:	24 volts DC
Fuse:	4 amp, quick-blow, AGC-4
Power supply:	16 AA alkaline disposable batteries. When used properly, one set of batteries should yield over 700 operations.
Control Cable:	30 feet in length (9.1 meters), 5-conductor, extra-flexible, PUR insulation
Controller:	Requires two-hand operation. The 'enable' button must be depressed while rotating the controller selector switch.

A programmable micro-controller manages control inputs, motor functions, monitors and limits mechanical travel and performs timing functions to protect the motor in a stalled condition.

An intelligent 'H-bridge' motor driver provides start/stop/braking motor functions. The H-bridge has integral thermal shutdown protection.



A Group CBS Company

Chicken Switch is a Registered Trademark of CBS ArcSafe.

Copyright 2004-2018, CBS ArcSafe. All rights reserved.

---

**Worldwide Headquarters & U.S. Sales**

CBS ArcSafe, Inc. A Group CBS Company  
2616 Sirius Road | Denton, TX 76208  
Ph: 877-4-SAFETY | Ph: 940-382-4411 | Fx: 940-382-9435  
[info@CBSArcSafe.com](mailto:info@CBSArcSafe.com)

**Charleston, WV Facility**

4782 Chimney Drive | Charleston, WV 25302  
Ph: 800-248-4958 | Ph: 304-965-9220 | Fx: 304-965-9221

**U.K. /Europe Office**

27 Cressey Avenue | Shenley Brook End  
Milton Keynes, Buckinghamshire  
United Kingdom MK57EL  
Phone: +447 770 500577